



Tools Needed:
 5/16" Wrench
 3/8" Wrench
 1/8" Allen Head Wrench

1. Unplug from power outlet next to fuse holder.
2. Remove pin (J-11) from pc board.
3. Disconnect belt from belt bracket and move belt out of the way.
4. Loosen 2 bolts on each end of component rack and slide right then out.

NOTE: THIS DRAWING EMBODIES A CONFIDENTIAL PROPRIETARY DESIGN ORIGINATED AND OWNED BY QUIKSERV CORP., AND IS SUBMITTED UNDER A CONFIDENTIAL RELATIONSHIP. ALL PATENT, MANUFACTURING, SALE RIGHTS REGARDING THE SAME ARE RESERVED EXCEPT TO THE EXTENT RIGHTS ARE EXPRESSLY GRANTED TO OTHERS. THE RECIPIENT AGREES BY ACCEPTING THESE DRAWINGS NOT TO SUPPLY OR DISCLOSE ANY INFORMATION REGARDING THEM TO ANY UNAUTHORIZED PERSON.

Quikserv Corp.
 1-800-388-8307
 www.quikserv.com

ELECTRICAL COMPONENT RACK REMOVAL

Submitted By:
 BRIAN COBLE

Date:
 10/27/2014

Sheet:
 ECR-REMOVAL