

MANUAL BI-FOLD TROUBLE SHOOTING PROCEDURES

Trouble	Probable Cause	Probable Solution
---------	----------------	-------------------

**Only the
Right or Left
Door Opens**

1. Loose roller strap (Top or Bottom Strap)	Adjust and tighten
2. Broken roller strap assembly	Replace and adjust
3. Loose roller set screws(s)	Adjust and tighten

**Door are
Misaligned**

1. The roller strap is loose or stretched	Adjust and tighten
2. Loose Roller set screws(s)	Adjust and tighten
3. Bent Hinge	Replace hinge assembly
4. Defective cable assembly	Replace with new cable assembly