

# SELF CLOSING SINGLE SLIDER

## TROUBLE SHOOTING PROCEDURES

Trouble	Probable Cause	Probable Solution
<b>Door is not Closing</b>	<ol style="list-style-type: none"> <li>1. Door Dragging</li> <li>2. Unit installed out of square</li> <li>3. Door obstructed</li> <li>4. Defective side rail</li> <li>5. Door guide worn or bent</li> <li>6. Defective cable assembly</li> <li>7. Weight stuck</li> <li>8. Magnet in hold-open position</li> </ol>	<p>Adjust door or door bracket</p> <p>Contact construction company</p> <p>Check locks or remove obstruction</p> <p>Replace or oil slide rail</p> <p>Replace with new door guide</p> <p>Replace with new cable assembly</p> <p>Check for obstructions and remove</p> <p>Place magnet cap over magnet</p>
<b>Door not Opening</b>	<ol style="list-style-type: none"> <li>1. Door locked</li> <li>2. Counter weight obstructed</li> <li>3. Defective side rail</li> <li>4. Defective cable assembly</li> </ol>	<p>Check locks and auto lock handle</p> <p>Check for and remove obstructions</p> <p>Replace or oil slide rail</p> <p>Replace with new cable assembly</p>
<b>Door not Staying Open</b>	<ol style="list-style-type: none"> <li>1. Broken Magnet</li> <li>2. Door stop bracket need adjusted</li> </ol>	<p>Replace magnet</p> <p>Readjust the bracket to magnet</p>