


**TYPICAL
CM-1 INSTALLATION**

- 1) Quikserv windows must be installed level and square to work properly.
- 2) Anchor through each side at two places approx. 5" at top and bottom of each side jamb.
(See Figure 1)
- 3) Recommended height from floor to service opening to be 36".
(Check all local and city codes)
- 4) Silicone all exterior and interior joint
- 5) All other type of anchoring to be approved by certified engineer.

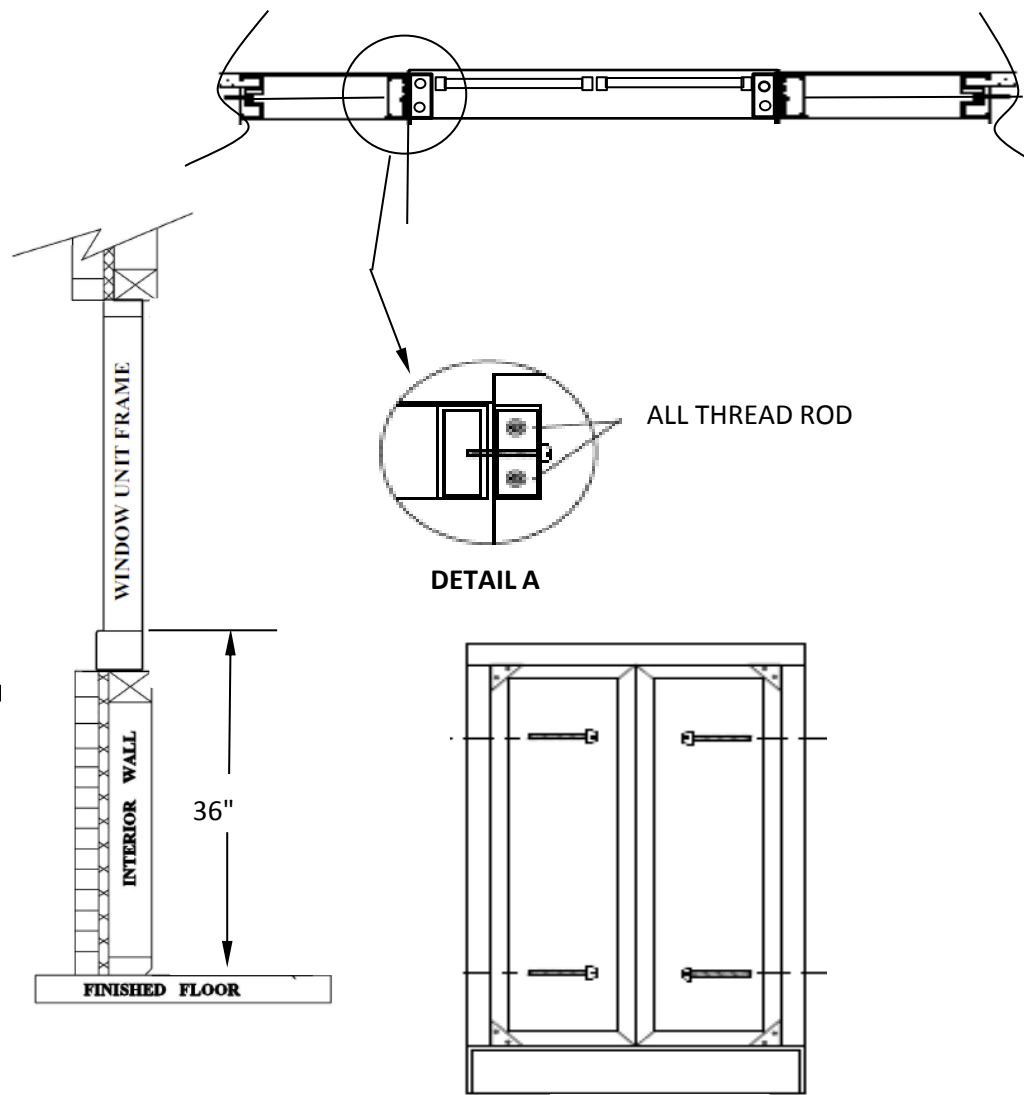

DETAIL A

FIGURE 1

General Notes

Actual Dimension
24"(W) x 38-1/2"(H)

Service Opening
16"(W) x 32"(H)

Rough Opening
24-3/8"(W) x 38-7/8"(H)

NOTE 1:

Anchor Screws to be supplied by contractor.

CAUTION:

Use caution when drilling thru the side jambs. All thread rods are located in each side jambs.
(See Detail A)

QUIKSERV
11441 BRITTMOORE PARK DR.
HOUSTON, TX., 77041

NOTE: THIS DRAWING EMBODIES A CONFIDENTIAL PROPRIETY DESIGN ORIGINATED AND OWNED BY QUIKSERV CORP. AND IS SUBMITTED UNDER A CONFIDENTIAL RELATIONS ALL PATENT, MANUFACTURING, SALE RIGHTS REGARDING THE SAME ARE RESERVED EXCEPT TO THE EXTENT RIGHTS ARE EXPRESSLY GRANTED TO OTHERS. THE RECIPIENT AGREES BY ACCEPTING HIP. THESE DRAWINGS NOT TO SUPPLY OR DISCLOSE ANY INFORMATION REGARDING THEM TO ANY UNAUTHORIZED PERSON.

TITLE: INSTALLATION PROCEDURE				
Drawing Name CM-1 INSTALLATION DRAWING				
DATE 4/10/2016	DRAWN BY RBV	SCALE NTS	SHEET 1 of 1	SIZE A