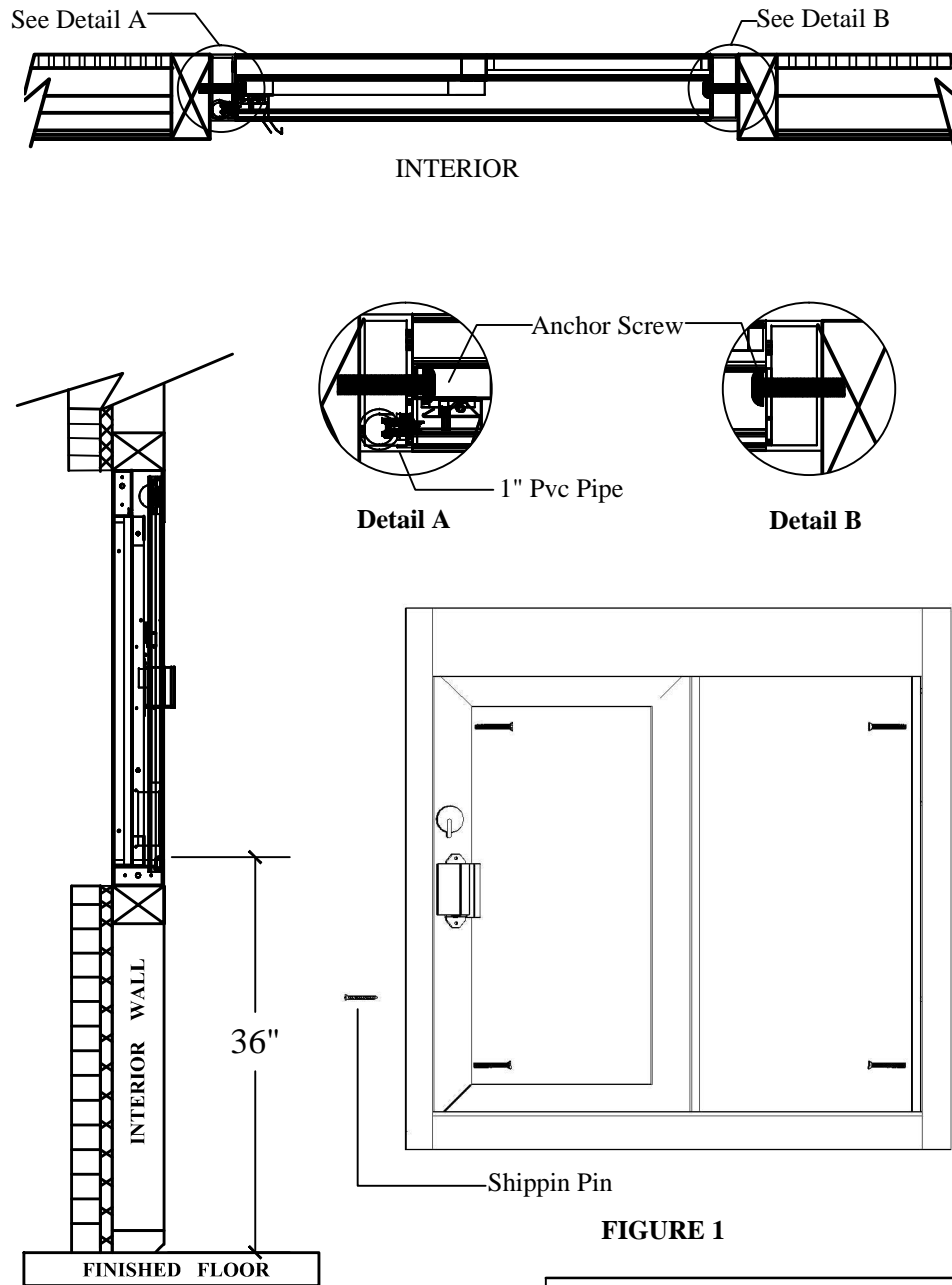


**TYPICAL  
SC-3030 INSTALLATION**

- 1) Quikserv windows must be installed level and square to work properly.
- 2) Anchor through each side jamb at two places approx. 5" at top and bottom of each jamb. (See Figure 1)
- 3) Recommended height from floor to service opening to be 36". (Check all local and city codes)
- 4) Silicone all external and internal joints.
- 5) All other type of anchoring to be approved by certified engineer.



**FIGURE 1**

**General Notes**

**Actual Dimension**  
36"(W) x 36"(H)

**Service Opening**  
14-1/2"(W) x 29"(H)

**Rough Opening**  
36-3/8"(W) x 36-3/8"(H)

**NOTE 1:**  
Remove shipping pin before installing the window. The shipping is located in the side jamb. (See Figure 1)

**NOTE 2:**  
Anchor screws to be supplied by contractor. (See Detail A & B)

**CAUTION:**  
Use caution when drilling thru the side jamb. A 1" pvc tube is located inside the jamb. Drilling into the 1" pvc tube will void warranty. (See Detail A)

**QUIKSERV**  
11441 BRITTMOORE PARK DR.  
HOUSTON, TX., 77041

TITLE: <b>INSTALLATION PROCEDURE</b>				
Drawing Name <b>SC-3030 INSTALLATION DRAWING</b>				
DATE 03/17/2016	DRAWN BY RBV	SCALE NTS	SHEET 1 of 1	SIZE <b>A</b>

NOTE: THIS DRAWING EMBODIES A CONFIDENTIAL PROPRIETY DESIGN ORIGINATED AND OWNED BY QUIKSERV CORP., AND IS SUBMITTED UNDER A CONFIDENTIAL RELATIONS ALL PATENT, MANUFACTURING, SALE RIGHTS REGARDING THE SAME ARE RESERVED EXCEPT TO THE EXTENT RIGHTS ARE EXPRESSLY GRANTED TO OTHERS. THE RECIPIENT AGREES BY ACCEPTING HIP. THESE DRAWINGS NOT TO SUPPLY OR DISCLOSE ANY INFORMATION REGARDING THEM TO ANY UNAUTHORIZED PERSON.