


SINGLE SLIDER WEIGHT CABLE REPLACEMENT LEFT HAND WINDOW SHOWN

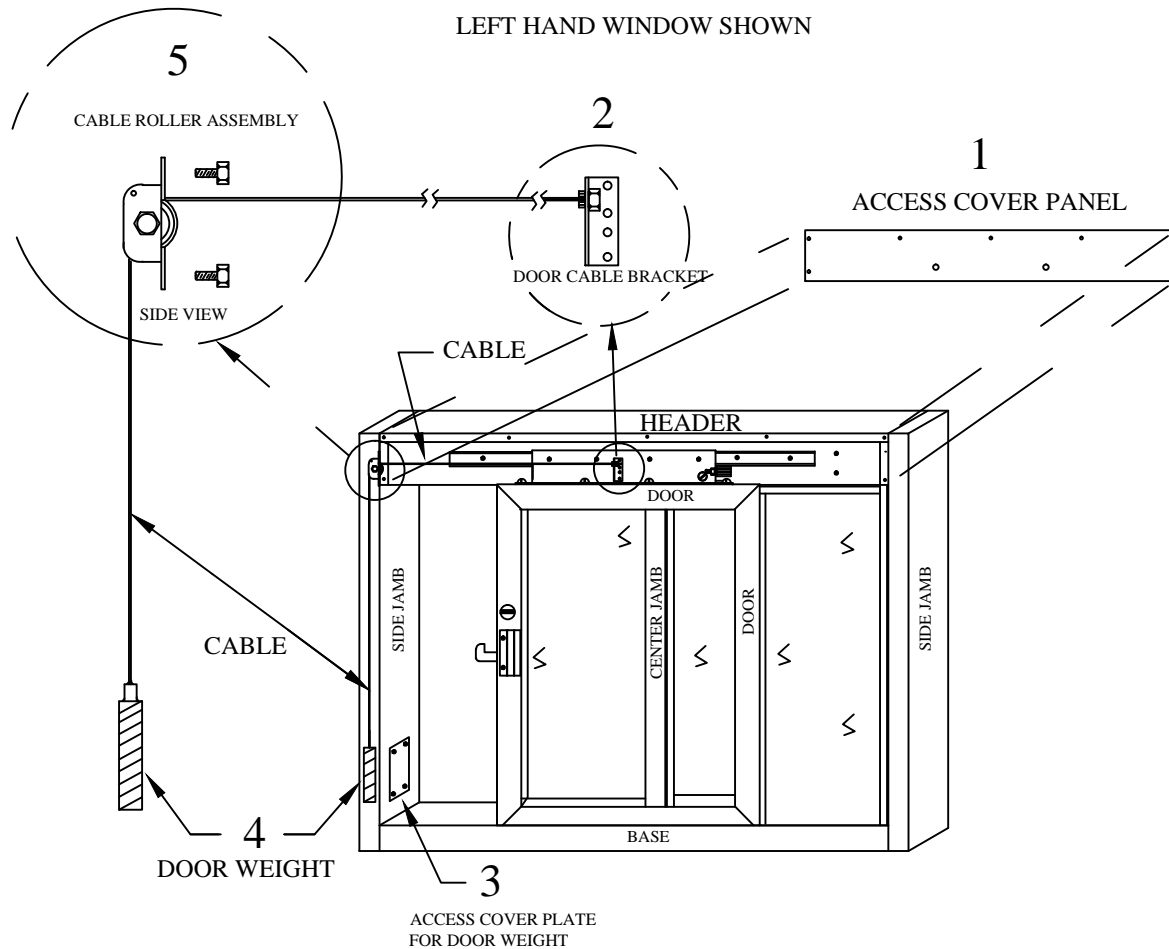

TOOLS NEEDED

5/16" Wrench / Nut Driver
 3/8" Wrench
 1/8" Allen head wrench
 Phillips head screw driver
 Small pliers or vise grips
 Lock-Tite

1. Remove the screws from the front access cover.
2. Remove the nut holding the weight cable to door bracket.
3. Remove the access cover plate for door weight.
4. Pull weight out of access hole and remove weight from cable.
5. Remove cable roller assembly with cable.
6. Replace with new cable assembly part# 5601 in reverse order it was removed.

NOTE: THIS DRAWING EMBODIES A CONFIDENTIAL PROPRIETARY DESIGN ORIGINATED AND OWED BY QUIKSERV CORP., AND IS SUBMITTED UNDER A CONFIDENTIAL RELATIONSHIP. ALL PATENT, MANUFACTURING, SALE RIGHTS REGARDING THE SAME ARE RESERVED EXCEPT TO THE EXTENT RIGHTS ARE EXPRESSLY GRANTED TO OTHERS. THE RECIPIENT AGREES BY ACCEPTING THESE DRAWINGS NOT TO SUPPLY OR DISCLOSE ANY INFORMATION REGARDING THEM TO ANY UNAUTHORIZED PERSON.

Quikserv Corp.
 www.quikserv.com
 1-800-388-8307

Single Slider Weight Cable Replacement

Submitted By:

Brian Coble

Date:

10/22/2014

Sheet:

SC-W